



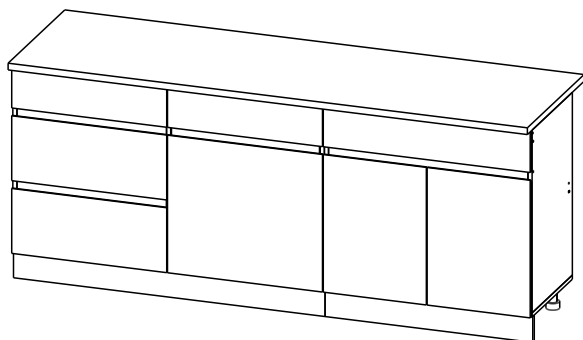

Кухонный гарнитур «Брауни» 2,0м

2000x846/720x600/300 (ШхВхГ) со столешницей
2000x820/720x442/300 (ШхВхГ) без столешницы

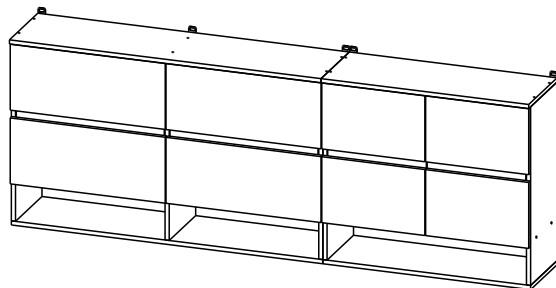

Уважаемые покупатели! Идеального качества сборки можно добиться только путем привлечения ПРОФЕССИОНАЛЬНОГО (толкового) сборщика мебели.



РУССКИЙ

Важная информация
Внимательно прочитайте.
Необходимо тщательно следовать всем рекомендациям.

**Сохраните эту
информацию
для справок в
дальнейшем.**

ВНИМАНИЕ!

Опрокидывание мебели может стать причиной получения серьезных травм или даже привести к смерти. Чтобы предотвратить опрокидывание, необходимо обеспечить стационарное крепление мебели к стене с помощью крепежных аксессуаров.

Материалы стен различаются, поэтому крепежные средства не прилагаются. Используйте крепежные средства, подходящие для материала стен в вашем доме. Для выбора подходящих крепежных средств обратитесь в специализированный магазин.



ENGLISH

Important information
Read carefully
Follow each step of the instruction carefully

**Keep this information
for further reference**

WARNING!






Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over it must be permanently fixed to the wall with the wall attachment devices.

Fastening devices for the wall are not included since different wall materials require different types of fastening devices. Use fastening devices suitable for the walls in your home. For advice on suitable fastening devices, contact your local specialized dealer.






1
2
3



















1	2000	600	26	1	7
2	1200	426	16	1	2
3	1200	300	16	1	2
4	800	426	16	1	3
5	1200	280	16	1	2
6	704	426	16	1	1
7	704	426	16	1	1
8	704	426	16	1	1
9	704	426	16	1	1
10	704	426	16	1	1
11	800	300	16	1	5
12	576	404	16	1	3
13	800	280	16	1	5
14	768	280	16	1	5
15	688	280	16	1	4
16	688	280	16	1	4
17	688	280	16	1	4
18	688	280	16	1	4
19	688	280	16	1	4
20	576	280	16	1	4
21	576	280	16	1	4
22	576	250	16	2	4
23	1200	100	16	1	2
24	800	100	16	1	5
25	518	140	16	2	2
26	570	120	16	3	3
27	400	140	16	4	3
29	518	100	16	1	5
30	768	60	16	1	5
31	768	60	16	2	5
32	380	120	16	2	3
33	400	100	16	2	3
34	576	60	16	4	4
35	597	530	16	1	6
36	397	530	16	1	6
37	397	530	16	1	6
38	597	254	16	2	6
39	597	254	16	2	6
40	597	250	16	2	6
41	797	153	16	1	5
42	397	254	16	2	5
43	397	254	16	2	5
44	597	153	16	1	6
45	597	153	16	1	6
46	797	536	3	1	7
47	546	397	3	3	7
48	597	716	3	4	7
49	797	180	3	1	7

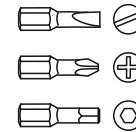

Ø5 mm
Ø6 mm

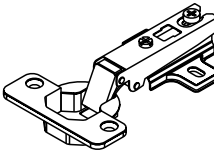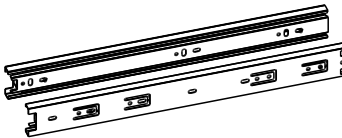
1,6x25		4x16		4x30							
											
x108	x66	x1	x141	x56	x14	x14	x8	x7	x14		
						350mm 			x3		
x21	x18	x9	x4		x5						

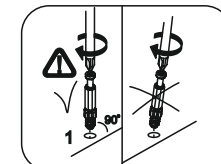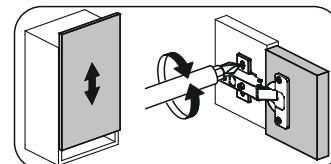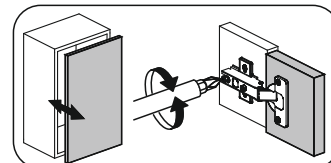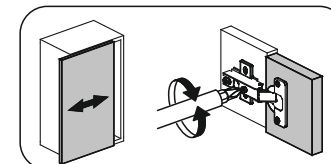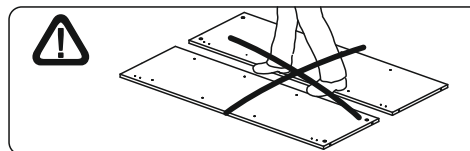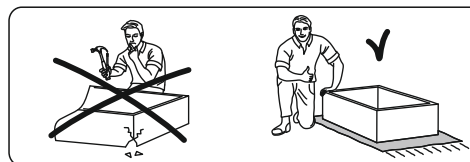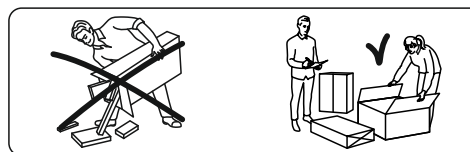

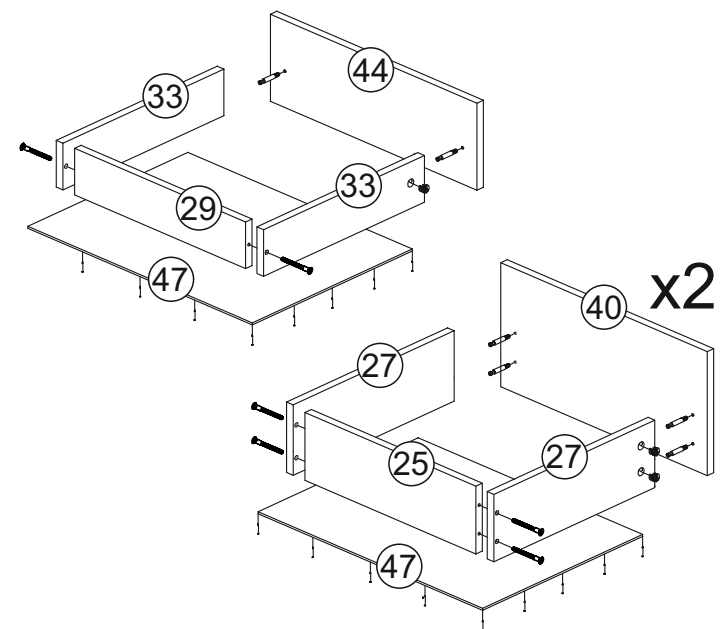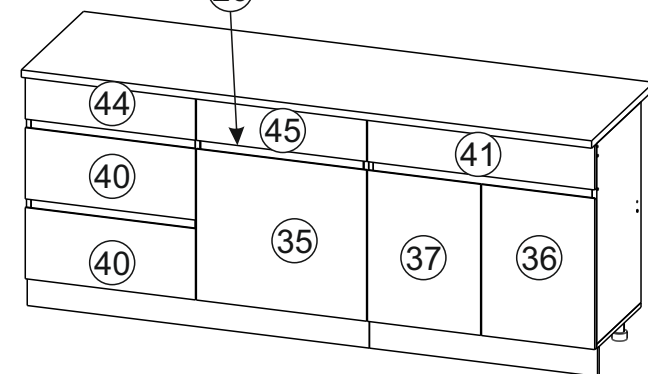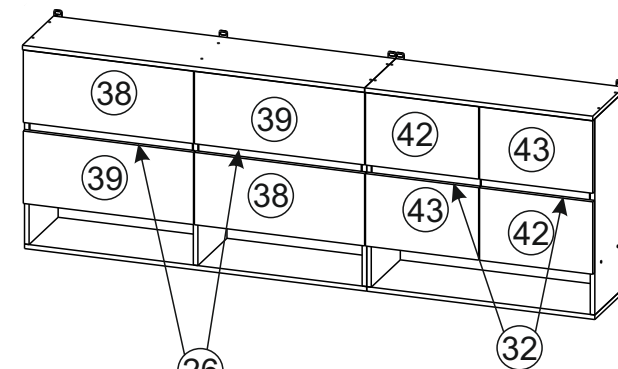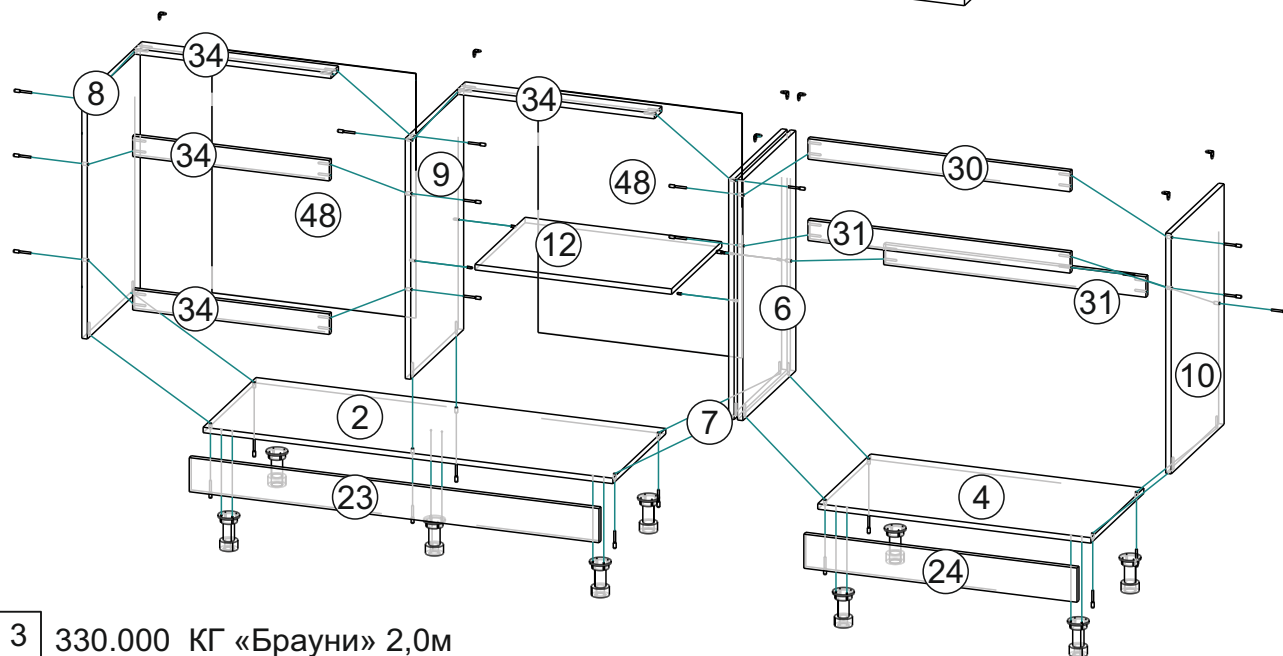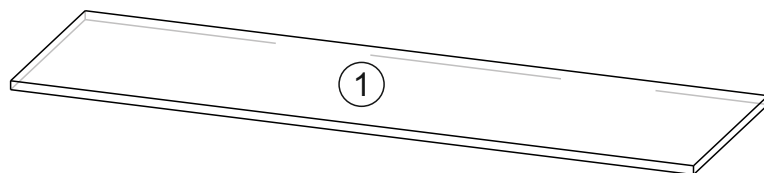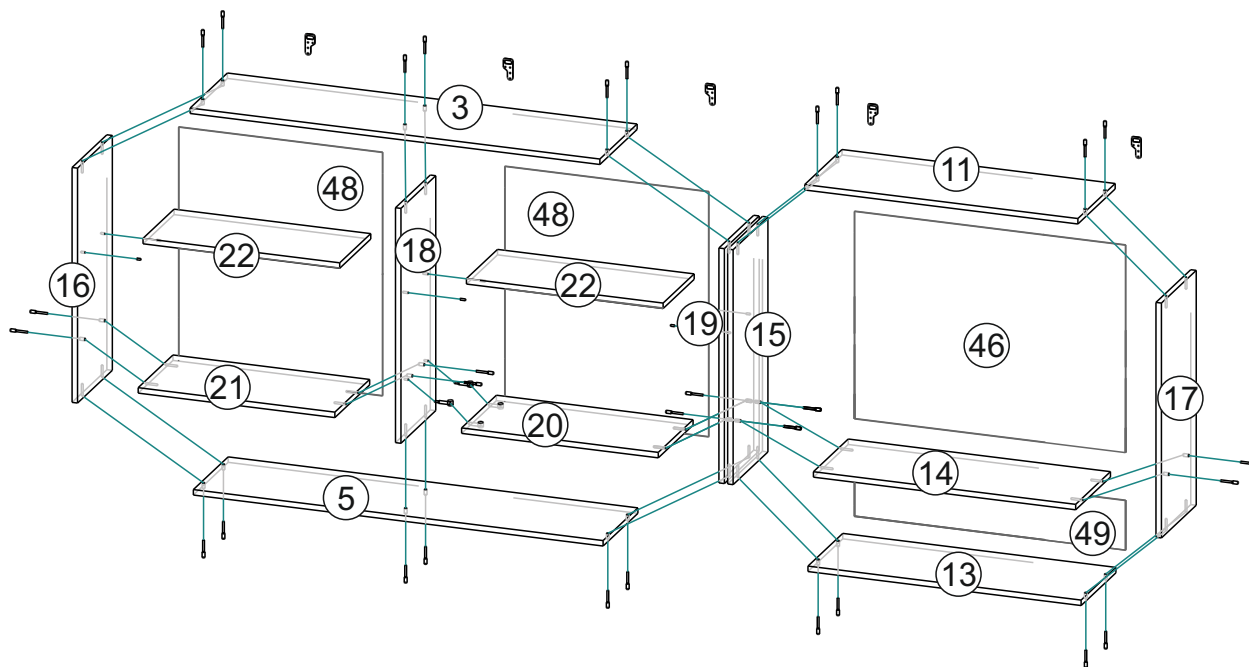

[illegible]

2

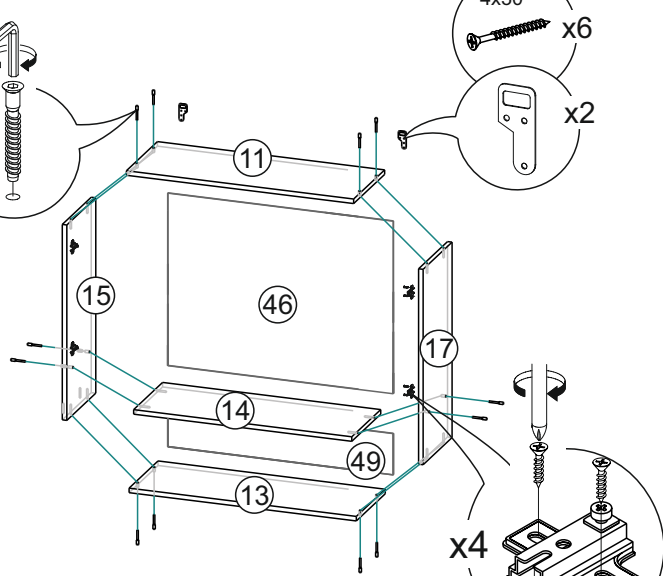

x12

4x30 x6

x2

x4

11

15

14

13

46

17




49

3


Diagram 3 illustrates the final step of mounting the door handle. It shows the door handle assembly being secured to the door edge using four screws. The word "front" is written vertically on the left side of the door edge. A circular inset provides a close-up view of a screw, labeled "4x16mm" and "x3".

[illegible]


5

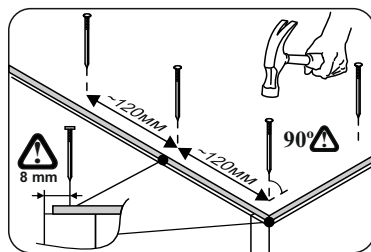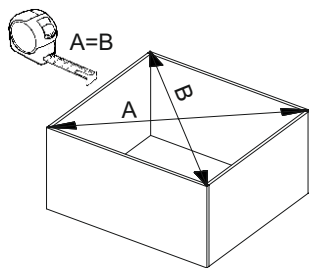
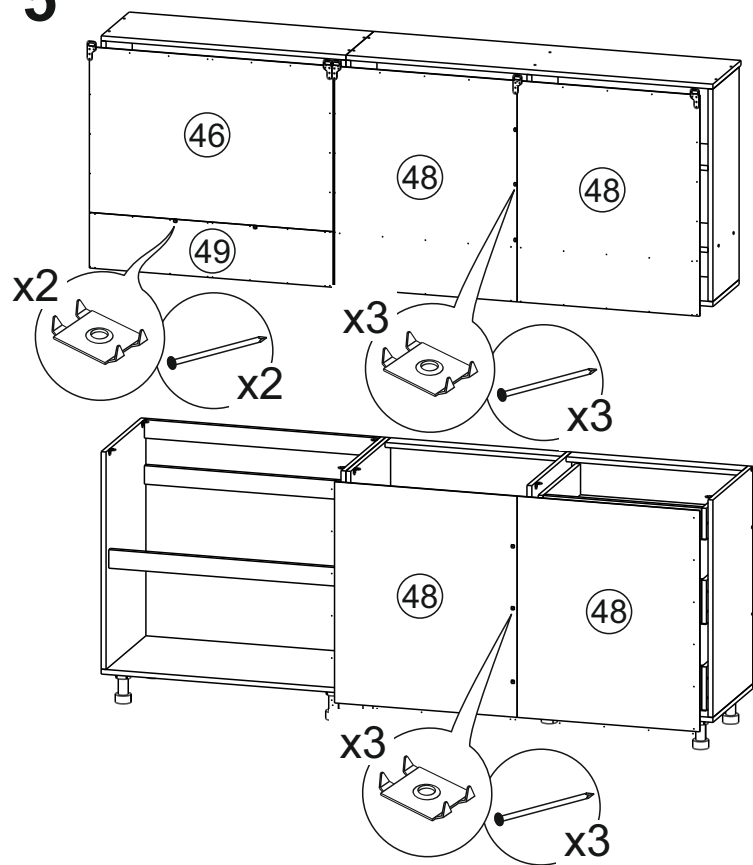


6

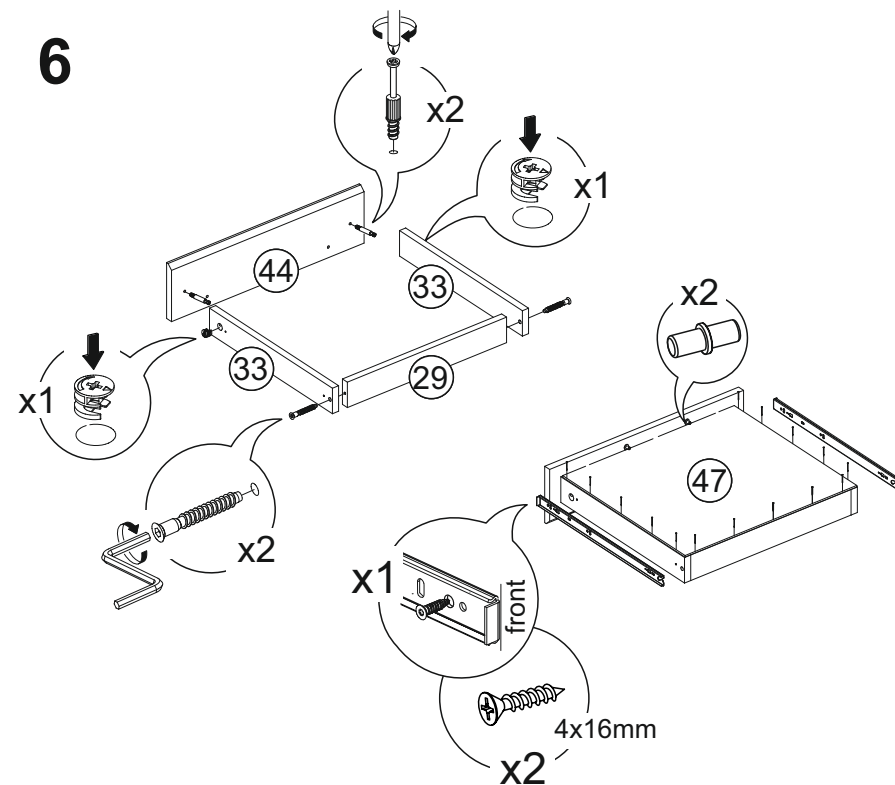

7

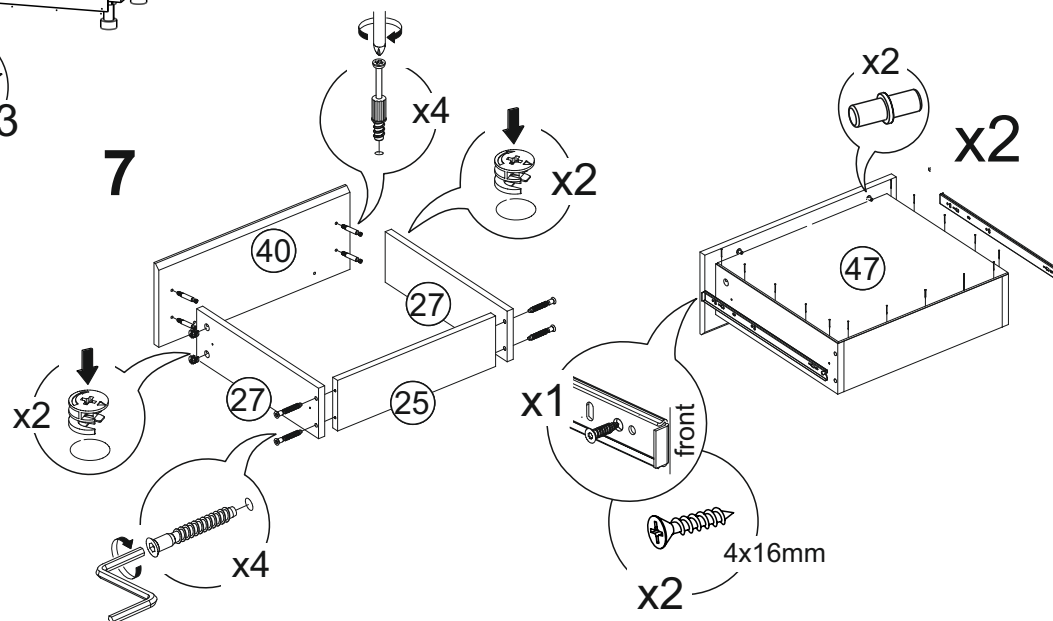

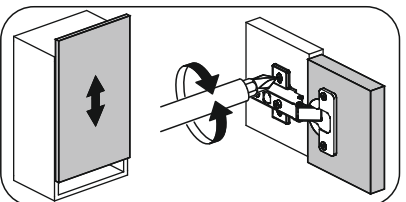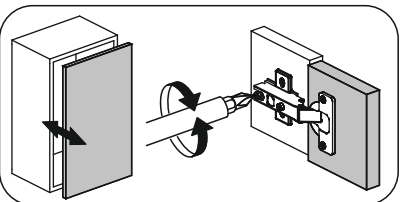

Technical drawing of a rectangular box. The top edge is divided into three segments: 50, 426, and 124, with a total dimension of 600. The left side is labeled "Передняя часть" (Front side) and the right side is labeled "Задняя часть" (Back side). The box is shown with a hatched top surface and two vertical supports at the bottom.

